

MODELS

OSS FC 24 (24Vac / 2 relays)

OSS FC 240 (240Vac / 2 relays)

TFL24 Series Thermostat

TFL24 (Thermostat)

TFLH24 (Thermostat with humidity sensor)

TFLG24 (Thermostat with CO₂)

TFLGH24 (Thermostat with CO₂ and Humidity)

TDU Series Thermostat

TDU10 (Grey LCD, white enclosure)

TDU40 (Black LCD, black enclosure)

TDU70 (Black LCD, white enclosure)



OSS FC Series



OBTF24 Series



TDU10 / TDU40 / TDU70 Series

Description

The OSS FC Series Networkable Fan Coil Controller, and OBTF24 and 1BDU Series LCD Thermostats are designed for simple and accurate control of any fan coil application. The BACnet Fan Coil Controller is mounted inside the fan coil cabinet and incorporates a configurable fan coil algorithm, variable three speed fan control and either modulating or digital heating and cooling outputs. All inputs and high/low voltage outputs are centralized at the control module in the fan coil cabinet.

Features

- Built-in configurable fan coil algorithms
- Up to 10 inputs and 15 outputs (configurable)
- Select direction on digital inputs and all outputs
- Selectable proportional control band and dead band
- Selectable fan speed contacts
- Independent cool/heat setpoint for NSB/OCC mode
- No occupancy and NSB override
- Selectable internal or external temperature sensor (10KΩ)
- Change over by contact or 10KΩ temperature sensor
- Internal and external temperature sensor calibration
- Freeze protection
- Multi level lockable access menu and setpoint
- Removable, raising clamp, non-strip terminals

Thermostat Features

- Backlit LCD with simple icon and text driven menus
- Select thermostat's default display
- BACnet service port via on-board mini USB connector
- Selectable Fahrenheit or Celsius scale
- 3-wire connection to controller and 4 push buttons

Applications

- Compatible with 2 or 4 pipe systems
- Fan coil unit (up to 3 speeds and/or analog 0-10 Vdc)
- Cooling signal (on/off, floating or modulating 0-10 Vdc)
- Heating signal (on/off, floating, pulse or modulating 0-10 Vdc)
- Cool, Heat, Reheat, Reheat with fan, Changeover, Fan, Humidify and Dehumidify by cooling.

Network Communication

- BACnet® MS/TP or Modbus communication port
- Select MAC address via DIP switch or via network
- Automatic baud rate detection


BACnet MS/TP®

- Automatic device instance configuration
- Copy and broadcast configuration via thermostat menu or via BACnet to other controllers
- BACnet scheduler
- Firmware upgradeable via BACnet
- Support COV (change of value)

Modbus

- Modbus @ 9600, 19200, 38400 or 57600 bps
- RTU Slave, 8 bits (configurable parity and stop bits)
- Connects to any Modbus master


Controller Specifications

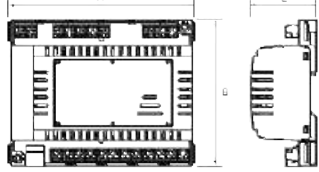Description	OSS FC 24	OSS FC 240
Inputs	2 fixed analog inputs (external temp. and changeover sensors); 10K Ω or contact 4 analog inputs (0-10 Vdc or 10 K Ω via DIP switches) 3 configurable digital inputs 1 night setback or occupancy sensor input	
Outputs	4 analog , 0-10 Vdc configurable outputs (changeover/cooling/heating, fan, humidity) 4 configurable TRIAC outputs (changeover/cooling/heating) 3 speed fan (Motor and/or compressor inductive ratings: ¼ Hp/10 LRA/2.5 FLA 240 Vac Maximum Resistive ratings: 7 Amp/1680 W at 240 Vac Maximum); configurable up to 3 speeds 2 or 4 configurable digital outputs (changeover/cooling/heating, humidity, 3A dry contact)	
Power supply	24 Vac	240 Vac
Power consumption	8 VA max. 24 Vac thermal fused.	
BACnet	BACnet [®] MS/TP @ 9600, 19200, 38400 or 76800 bps (BAS-C)	
Modbus	Modbus RTU slave @ 9600, 19200, 38400 or 57600. Selectable parity and stop bit configuration: No parity, 2 stop bit Even parity, 1 stop bit Odd parity, 1 stop bit	
Communication Connections	24 AWG twisted-shield cable (Belden 9841 or equivalent)	
Electrical Connections	0.8 mm ² [18 AWG] minimum	
Operating temperature	0°C to 50°C [32°F to 122°F]	
Storage temperature	-30°C to 50°C [-22°F to 122°F]	
Relative Humidity	5 to 95% non condensing	
Enclosure protection	IP 30 (EN 60529)	
Weight	635 g. [1.4 lb]	
Dimensions: A = 6.30" 160mm B = 5.00" 126mm C = 2.25" 57mm		

Thermostat Specifications

Description	0BTFL24 and 1BTDU Series
Temperature Sensor (TFL24)	
Setpoint Range	10°C to 40°C [50°F to 104°F]
Control Accuracy	±0.5°C [0.9°F] @ 22°C [71.6°F] typical calibrated
Display Resolution	±0.1°C [0.2°F]
Humidity Sensor (TFLH24, TFLGH24, and 1BTDU models with Humidity Sensors)	
Setpoint Range	10 to 65%RH
Control Accuracy	±3.5% RH
Display Resolution	0.1%
CO₂ Sensor (TFLG24, TFLGH24, and 1BTDU models with CO₂ Sensors)	
Operating Principle	Self-calibrating, Non-Dispersive Infrared (NDIR)
Sensor Range	400 to 2000 ppm
Accuracy	±30 ppm ±3% of reading (Accuracy is defined after minimum 3 weeks of continuous operation)
Response Time	2 minutes by 90%
Other	
Electrical connection	3 wires to EFCB controller and 2 wires (optional) to BACnet network service port 0.8 mm ² [18 AWG] minimum
BACnet service port	Mini USB connector
Power supply	24Vac or 24Vdc
Power consumption	1VA
Operating temperature	0°C to 50°C [32°F to 122°F]
Storage temperature	-30°C to 50°C [-22°F to 122°F]
Relative humidity	5 to 95 % non condensing
Enclosure protection	IP 30 (EN 60529)
Weight	120 g. [0.25 lb]
Note: The 0BTFL24/1BTDU thermostat functions only with the OSS FC controller. All the inputs/outputs are located on the OSS FC except for the temperature/humidity sensor built-in the 0BTFL24/1BTDU.	

Dimensions

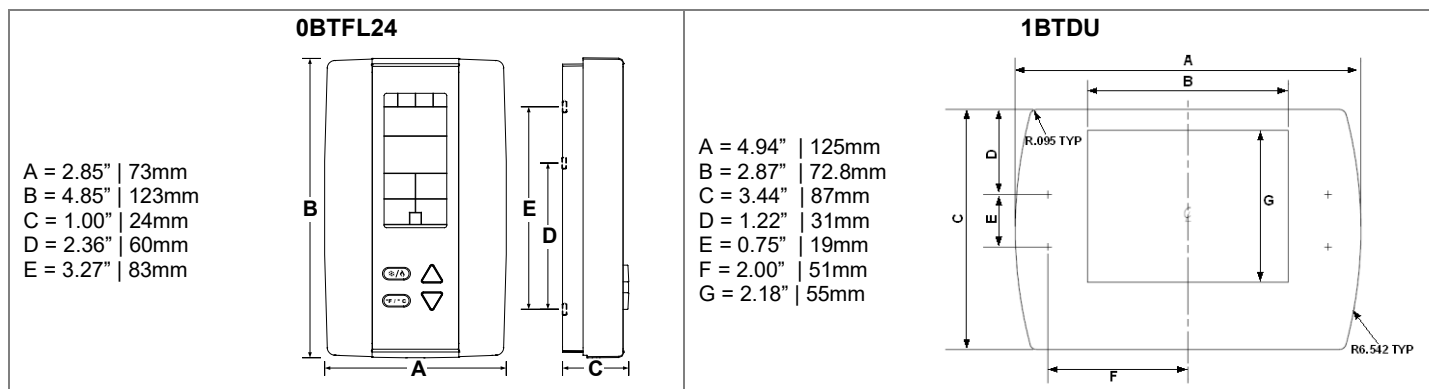

1BTDU Models

Model #	Temp	RH	CO ₂	Color
TDU10-100	•			grey LCD white enclosure
TDU10-101	•	•		
TDU10-102	•	•	•	
TDU10-103	•		•	



TDU10 Series

Model #	Temp	RH	CO ₂	Color
TDU40-100	•			black LCD black enclosure
TDU40-101	•	•		
TDU40-102	•	•	•	
TDU40-103	•		•	



TDU40 Series


Model #	Temp	RH	CO ₂	Color
TDU70-100	•			black LCD white enclosure
TDU70-101	•	•		
TDU70-102	•	•	•	
TDU70-103	•		•	



TDU70 Series


Interface

0BTFL24

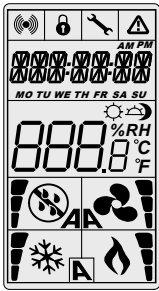

	Cooling ON A: Automatic		Communication Status		Alarm status
	Heating ON A: Automatic		Menu set-up Lock		Energy saving mode
	Fan ON A: Automatic		Programming mode (Technician setting)		Percentage of humidity
	Humidity ON 33, 66 or 100% output		Dehumidification ON 33, 66 or 100% output		°C: Celsius scale °F: Fahrenheit scale

1BTDU

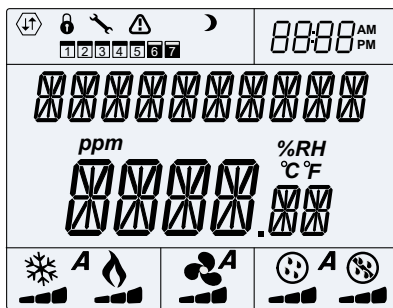


	Network Communication		User Lock		Programming Mode (Technician Setting)
	Alarm Status		Energy Saving Mode (NSB/OCC)		Schedule
	Time		ppm Parts Per Million		°C: Celsius Scale °F: Fahrenheit Scale %RH: Humidity
	Automatic Mode		Cooling		Heating
	Fan		Humidify		De-humidify

Mounting Instructions

0BTFL24

CAUTION: Remove power to avoid a risk of malfunction.

- Remove the captive screw that's holding the base and the front cover of the unit together.
- Lift the front cover of the unit to separate it from the base.
- Pull all wires through the holes in the base.
- Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- Mount the control module on the base and secure using the screw.

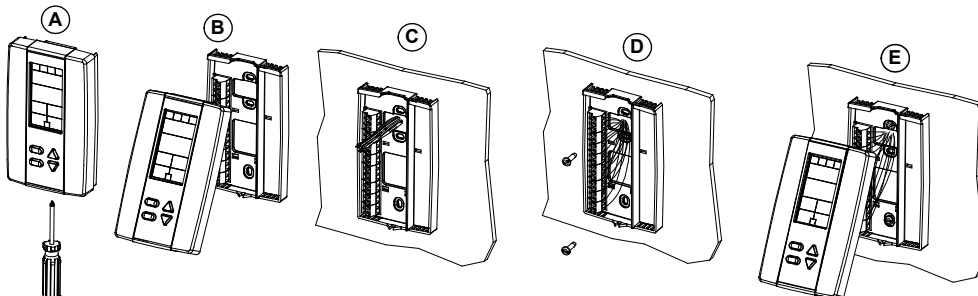


TDU



CAUTION: Remove power to avoid a risk of malfunction.

- Remove the wall mounting plate (highlighted) from the back of the thermostat.
- Install the mounting plate on the gang box.
- Pull the wires through the base hole and make the appropriate connections.
- Mount the thermostat onto the wall plate. To mount the thermostat correctly, place the top of the thermostat on the mounting plate first and push it into the grooves to snap it into place.
- Secure the thermostat using the screw (supplied).

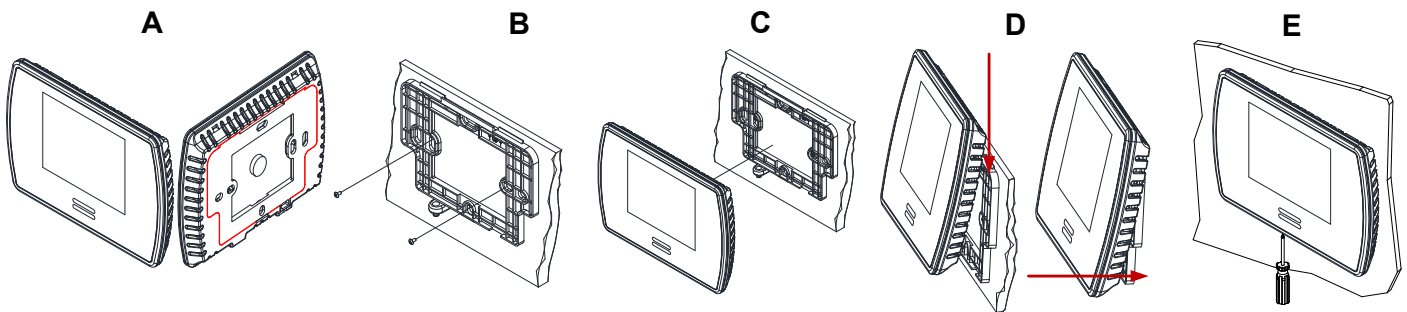

BACnet or Modbus Address DIP Switch (DS2)

MAC address for communication, are selectable by DIP switch using binary logic. If you do not change device instance in program mode, it will be automatically modified according to the MAC address.




Note: Avoid using addresses above 246 when selecting Modbus MAC address.

MAC Address	DS.1 = 1	DS.2 = 2	DS.3 = 4	DS.4 = 8	DS.5 = 16	DS.6 = 32	DS.7 = 64	DS.8 = 128	Default Device Instance
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	153000
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	153001
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	153002
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	153003
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	153004
...
126	OFF	ON	ON	ON	ON	ON	ON	OFF	153126
127	ON	ON	ON	ON	ON	ON	ON	OFF	153127

* Slave addresses available by setting DS.8 to ON

Wiring

We strongly recommend that all One Sightsolutions products be wired to a separate grounded transformer and that transformer shall service only One Sightsolutions products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

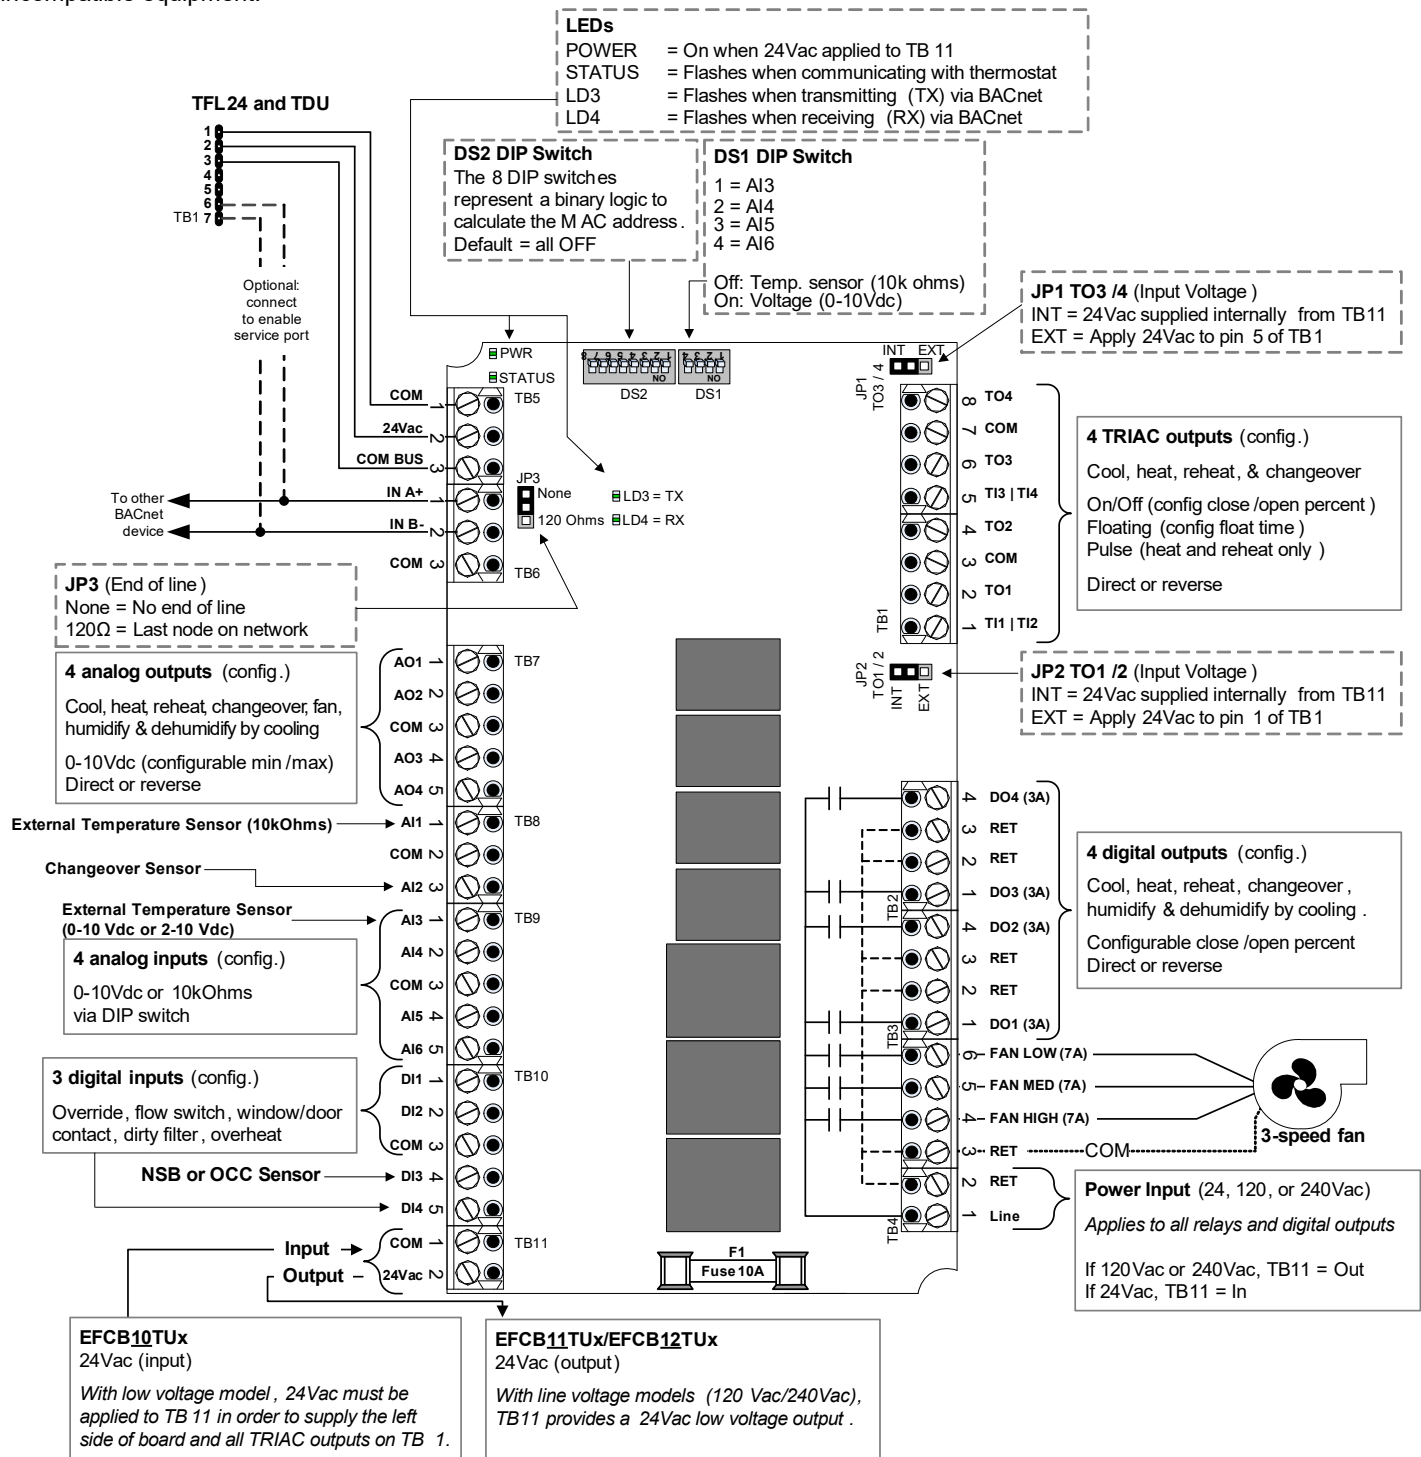


PCB Drawings



0BTFL24 Thermostat

3 wire cable (TB1 #1, 2 & 3)

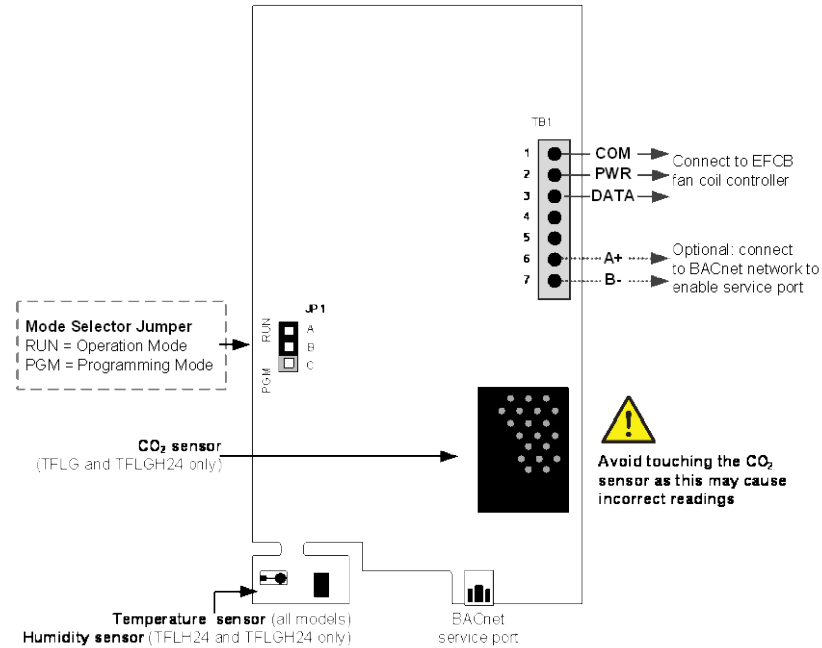Connect TB1 #6 (A+) & #7 (B-) to EFCB to enable the BACnet service port.




Mode Selection (JP1)

	RUN: Thermostat is in Operation Mode . Thermostat must be set in this mode for normal system operation. If not locked, setpoint and control mode can be changed by the end user.
	PGM: Thermostat is set in Programming Mode . Refer to the following sections for more details.



1BTDU Thermostat

3 wire cable (TB1 #1, 2 & 3)

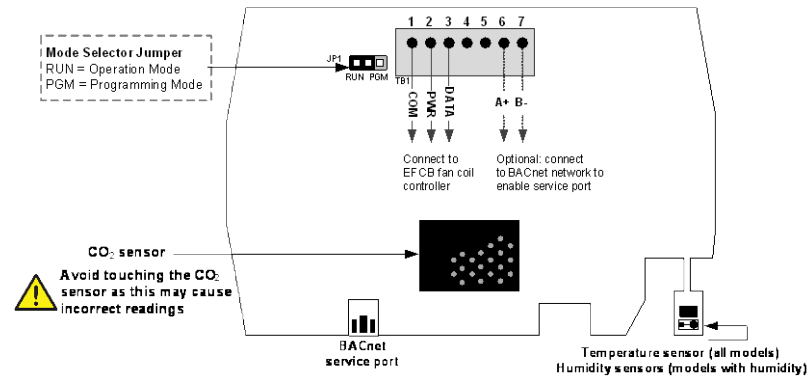Connect TB1 #6 (A+) & #7 (B-) to EFCB to enable the BACnet service port.






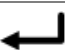
Mode Selection (JP1)

	RUN: Thermostat is in Operation Mode . Thermostat must be set in this mode for normal system operation. If not locked, setpoint and control mode can be changed by the end user.
	PGM: Thermostat is set in Programming Mode . Refer to the following sections for more details.

Access to Menus

The menu overviews and options are the same for both 0BTFL24 and 1BTDU thermostats. However, the action button or the button used to access the menus and save changes is different in the thermostats. Use the following menu overviews with the appropriate action button as per your thermostat.



Action Buttons on Thermostat


Action Button		Task
0BTFL24	1BTDU	
		Press to access the programming menus and save any changes.
		Press to return to the previous step without saving.

Analog Inputs – Menu Overview (1 of 8) | **AI1 and AI3**


Main Menu	Sub Menu	Configuration
-----------	----------	---------------

*** To save any changes , press  on TFL and  on TDU ***

*** To return to the previous step without saving , press  on TFL and  on TDU ***

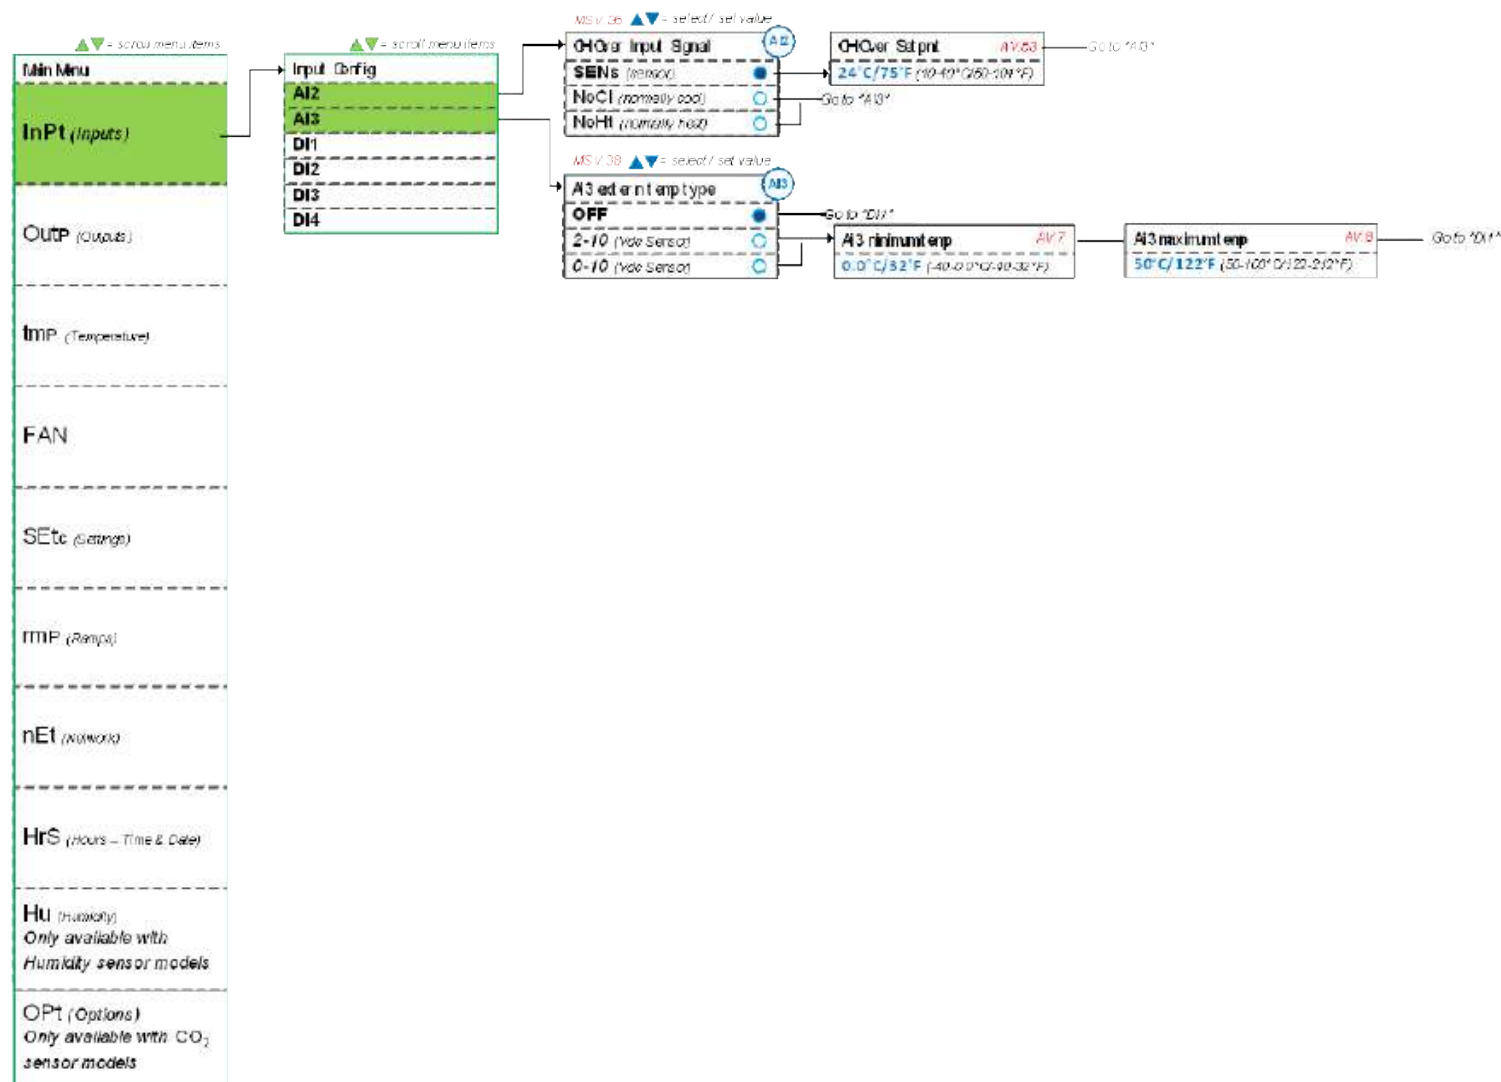


Digital Inputs – Menu Overview (2 of 8) | DI1 to DI4

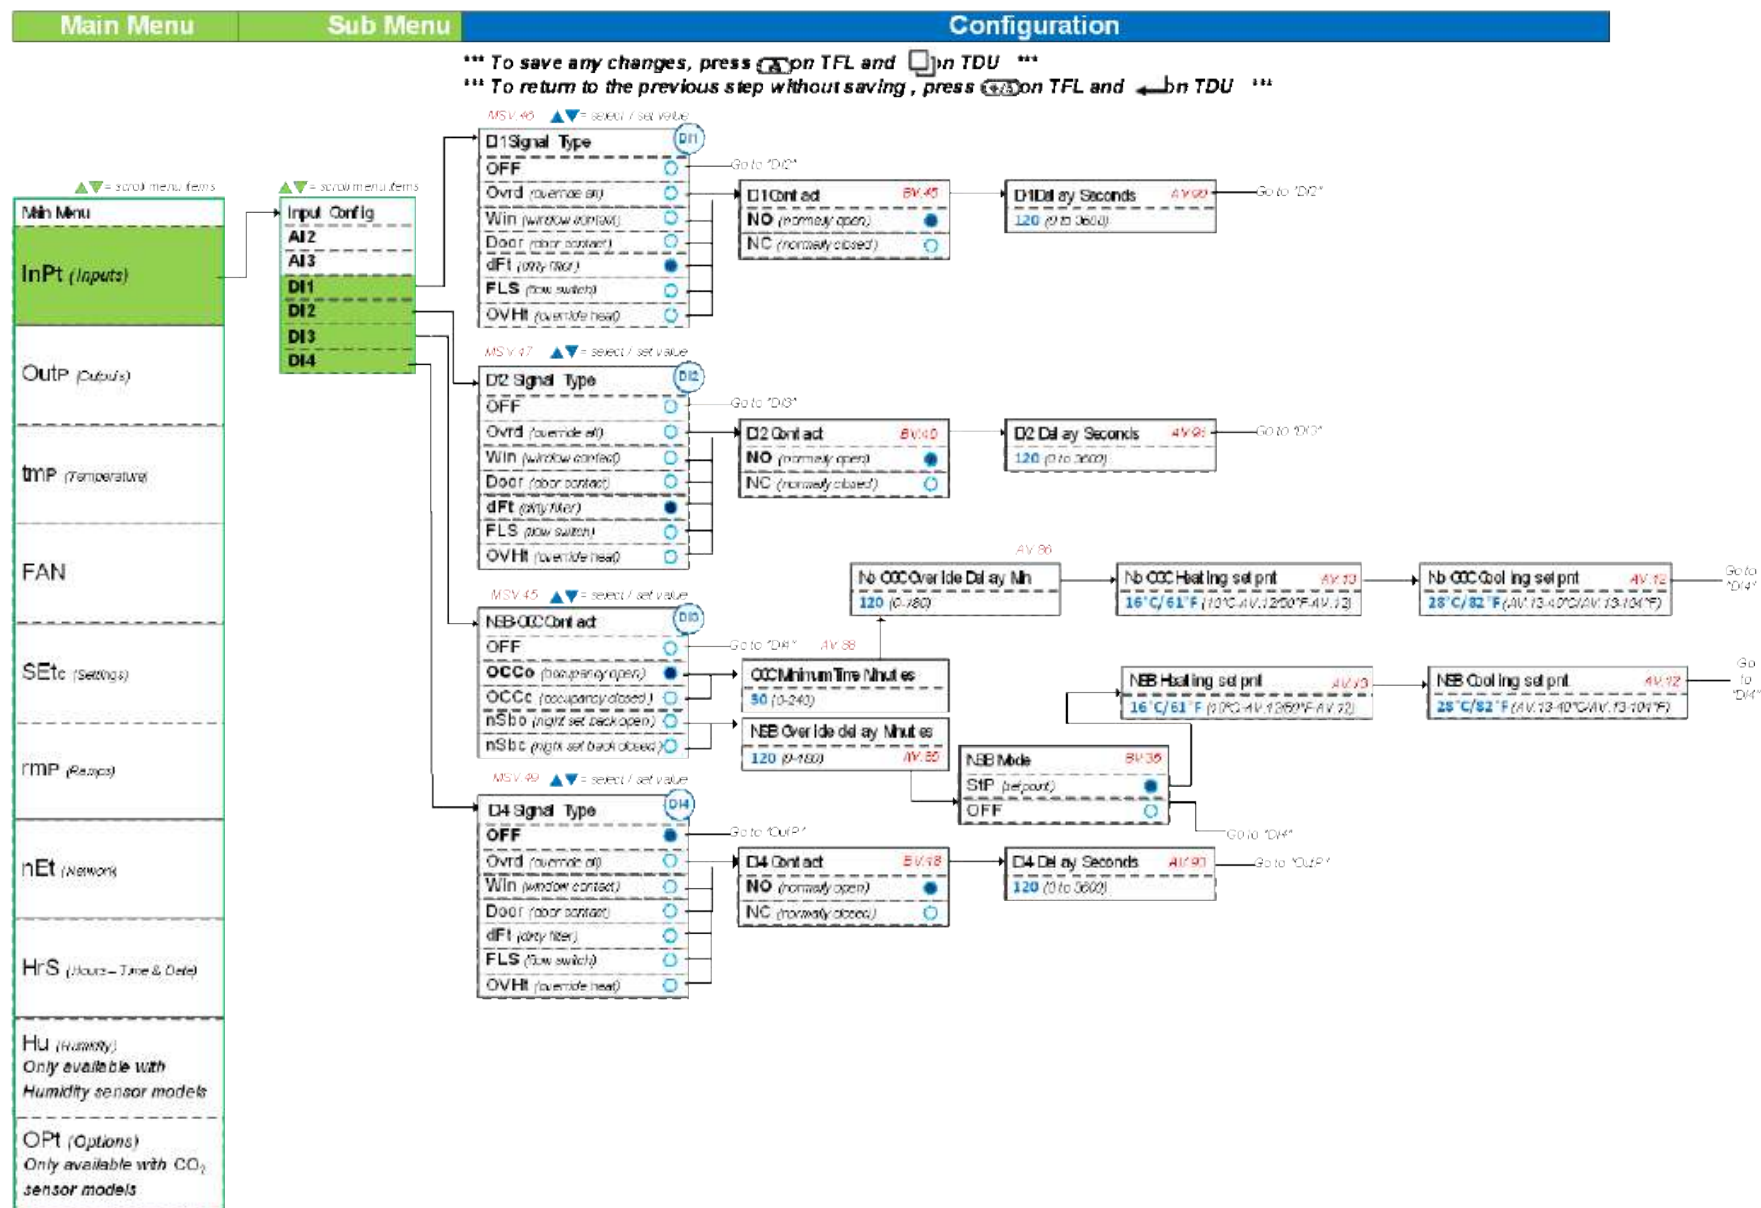


Configuration


Analog Outputs – Menu Overview (4 of 8) | AO1 to AO4

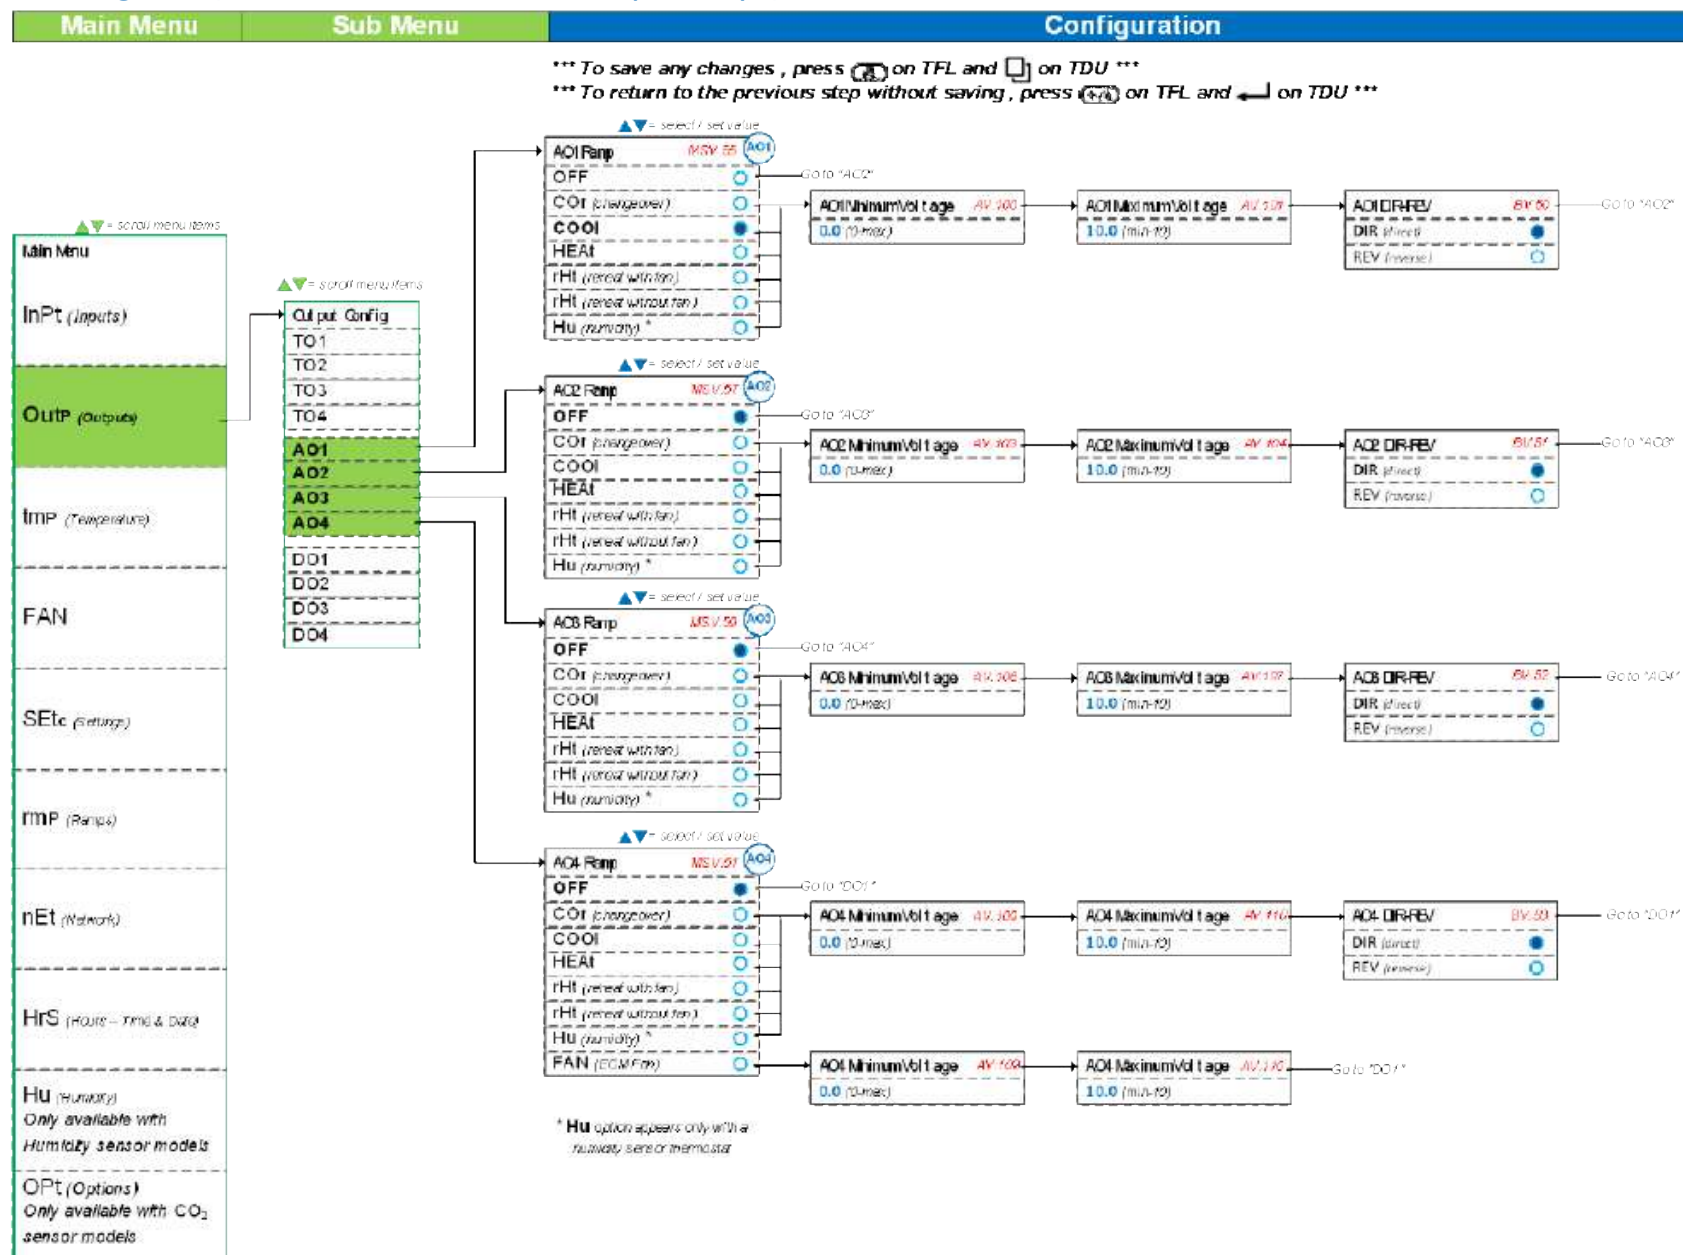


Digital Outputs – Menu Overview (5 of 8) | DO1 to DO4

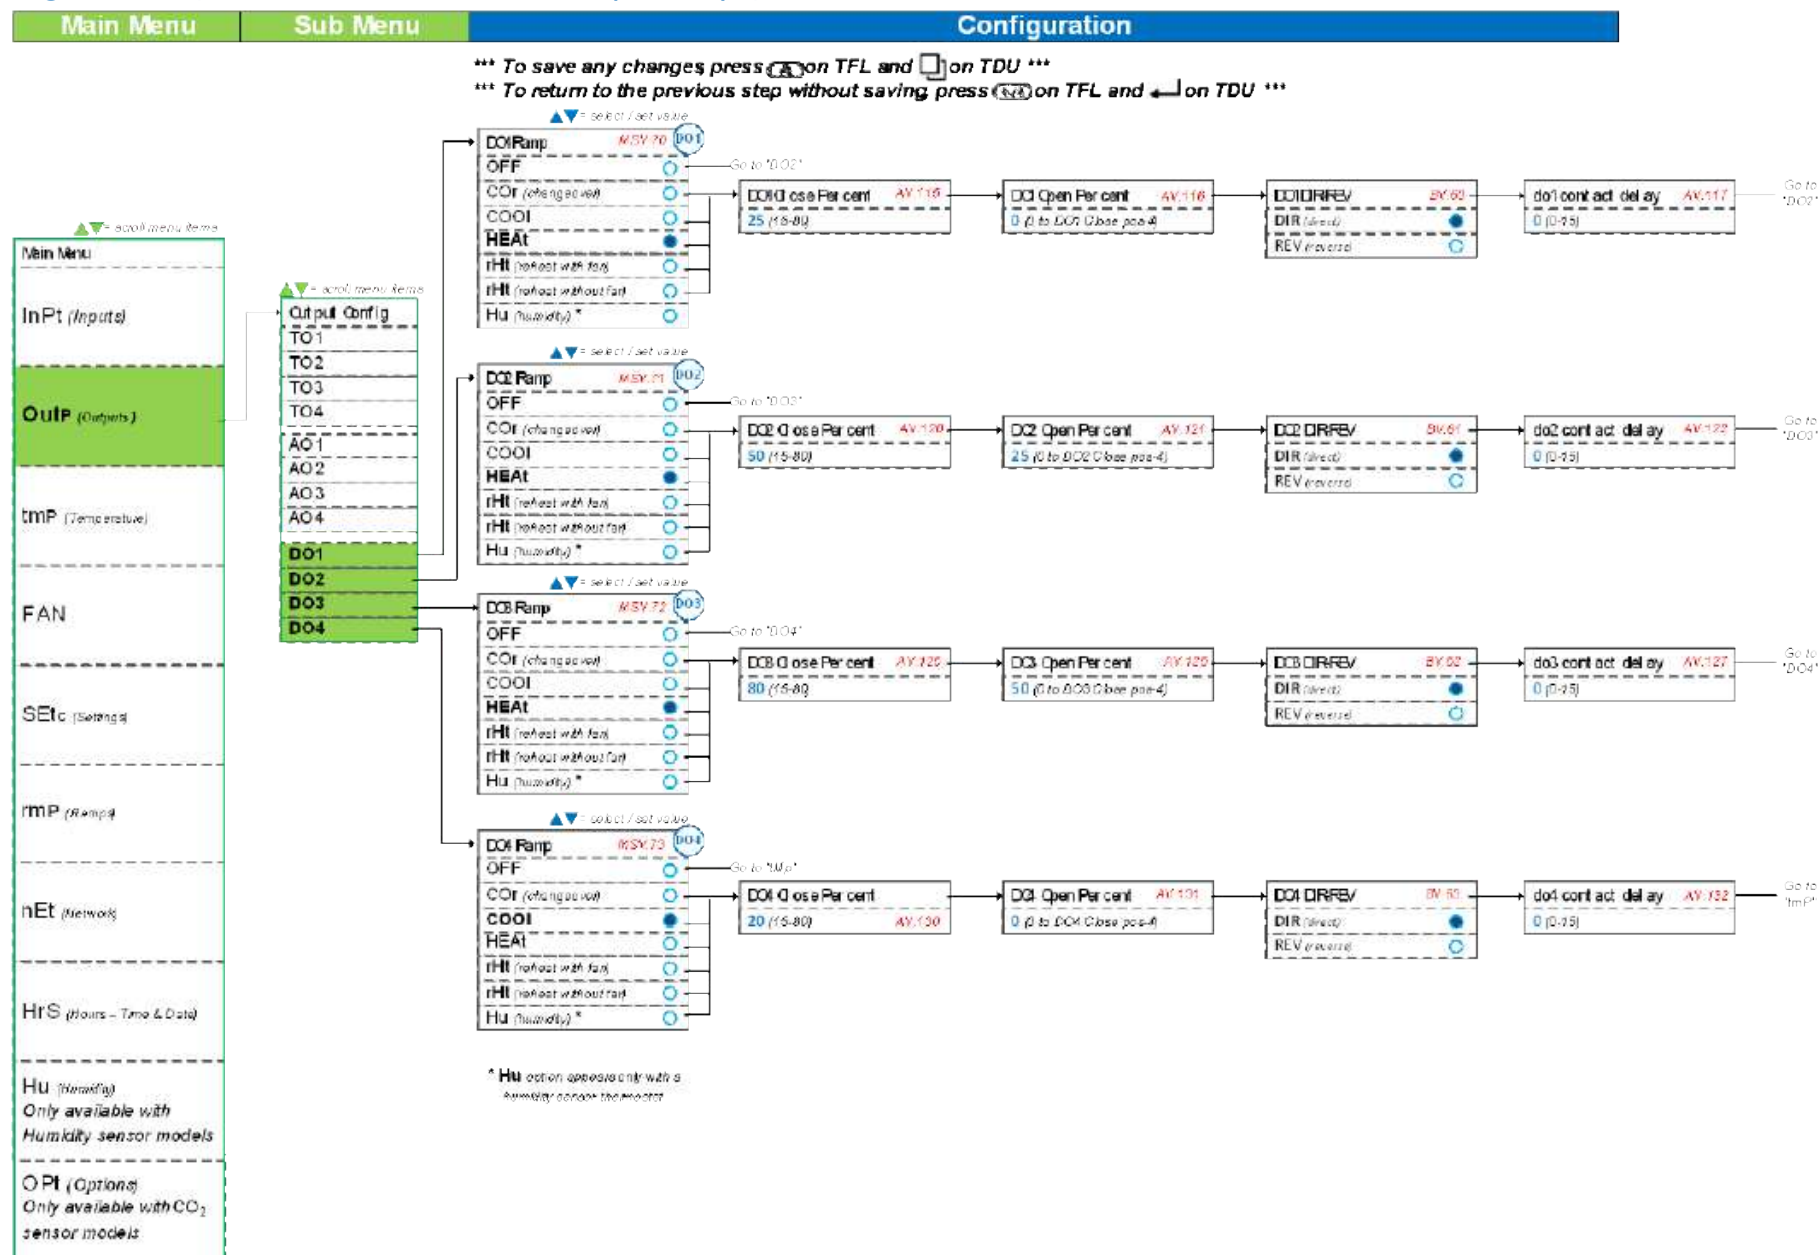

Settings – Menu Overview (6 of 8) | Temp, Fan, Settings and Ramps

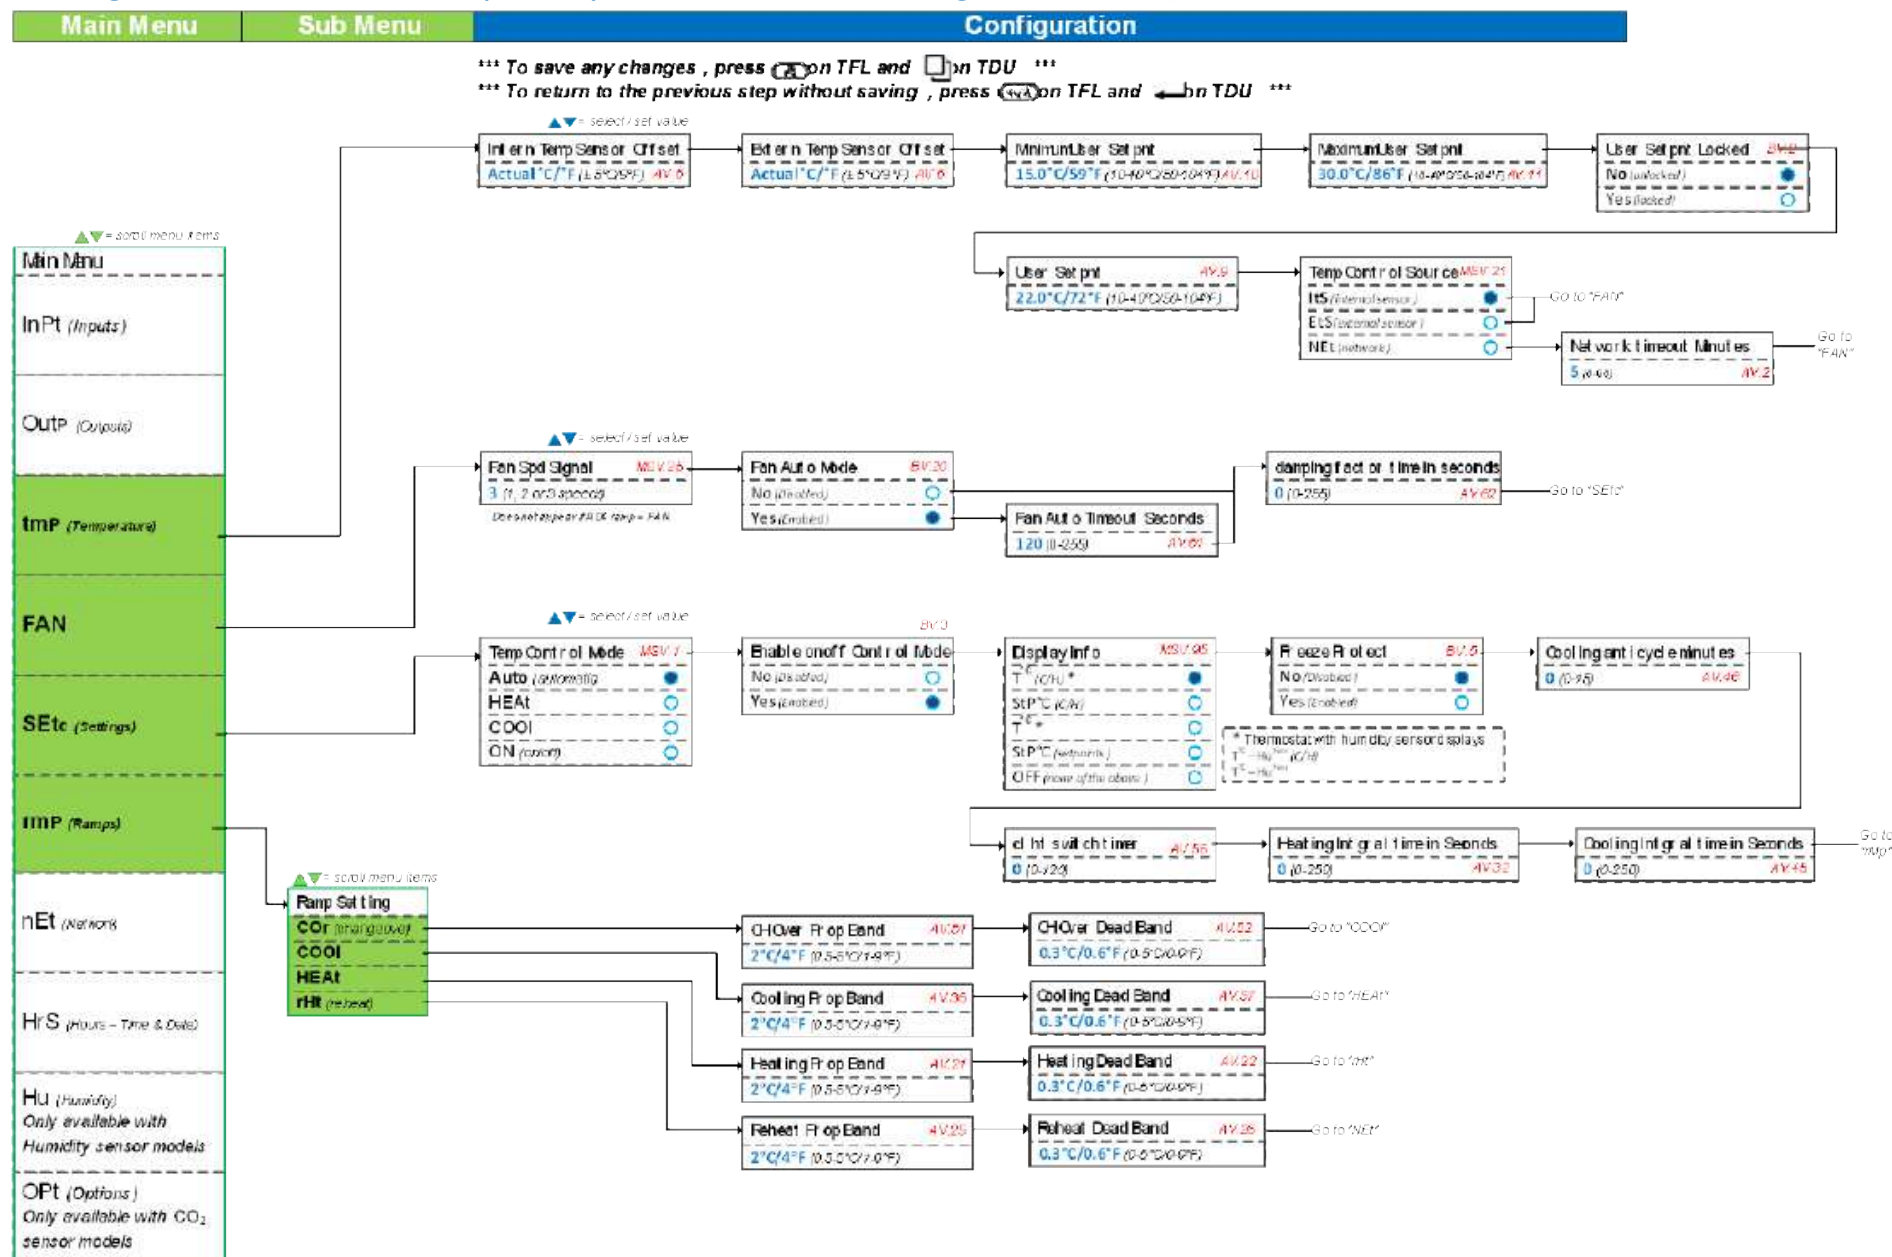


Main Menu	Sub Menu	Configuration
-----------	----------	---------------

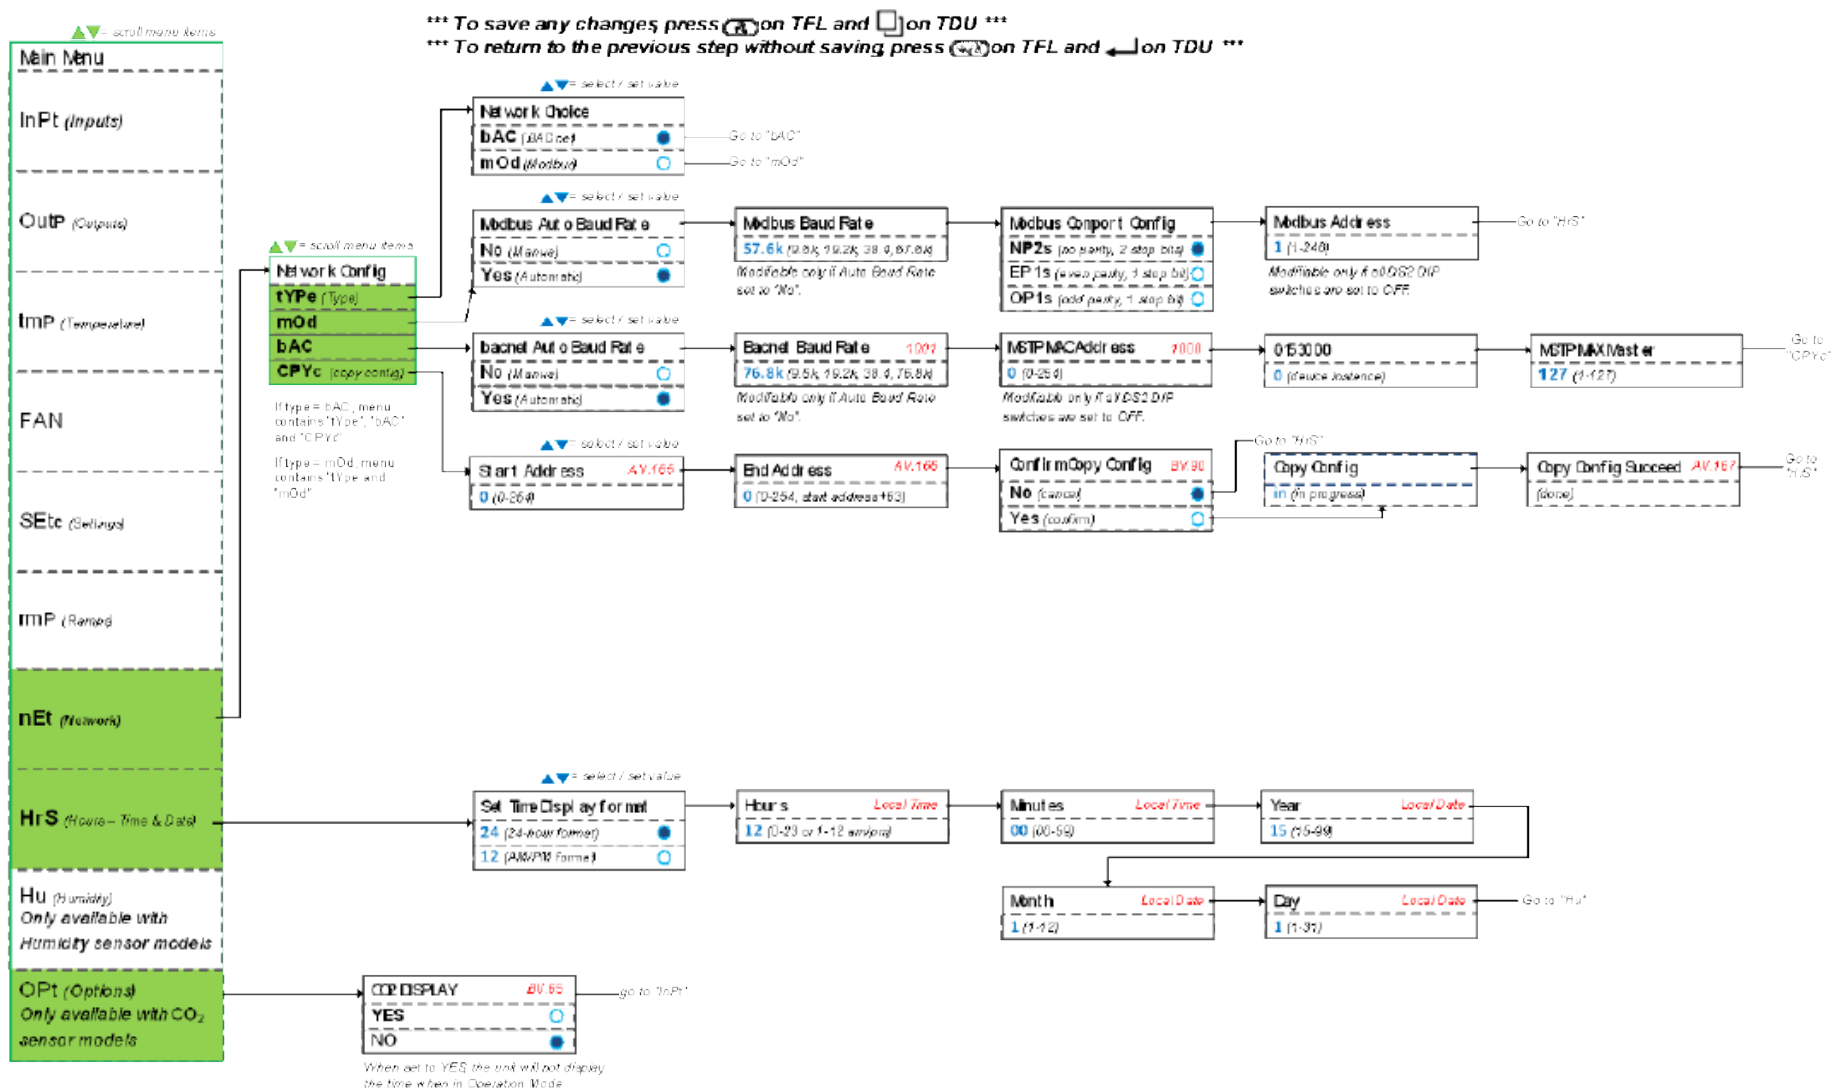

Humidity – Menu Overview (8 of 8) | *Humidity*



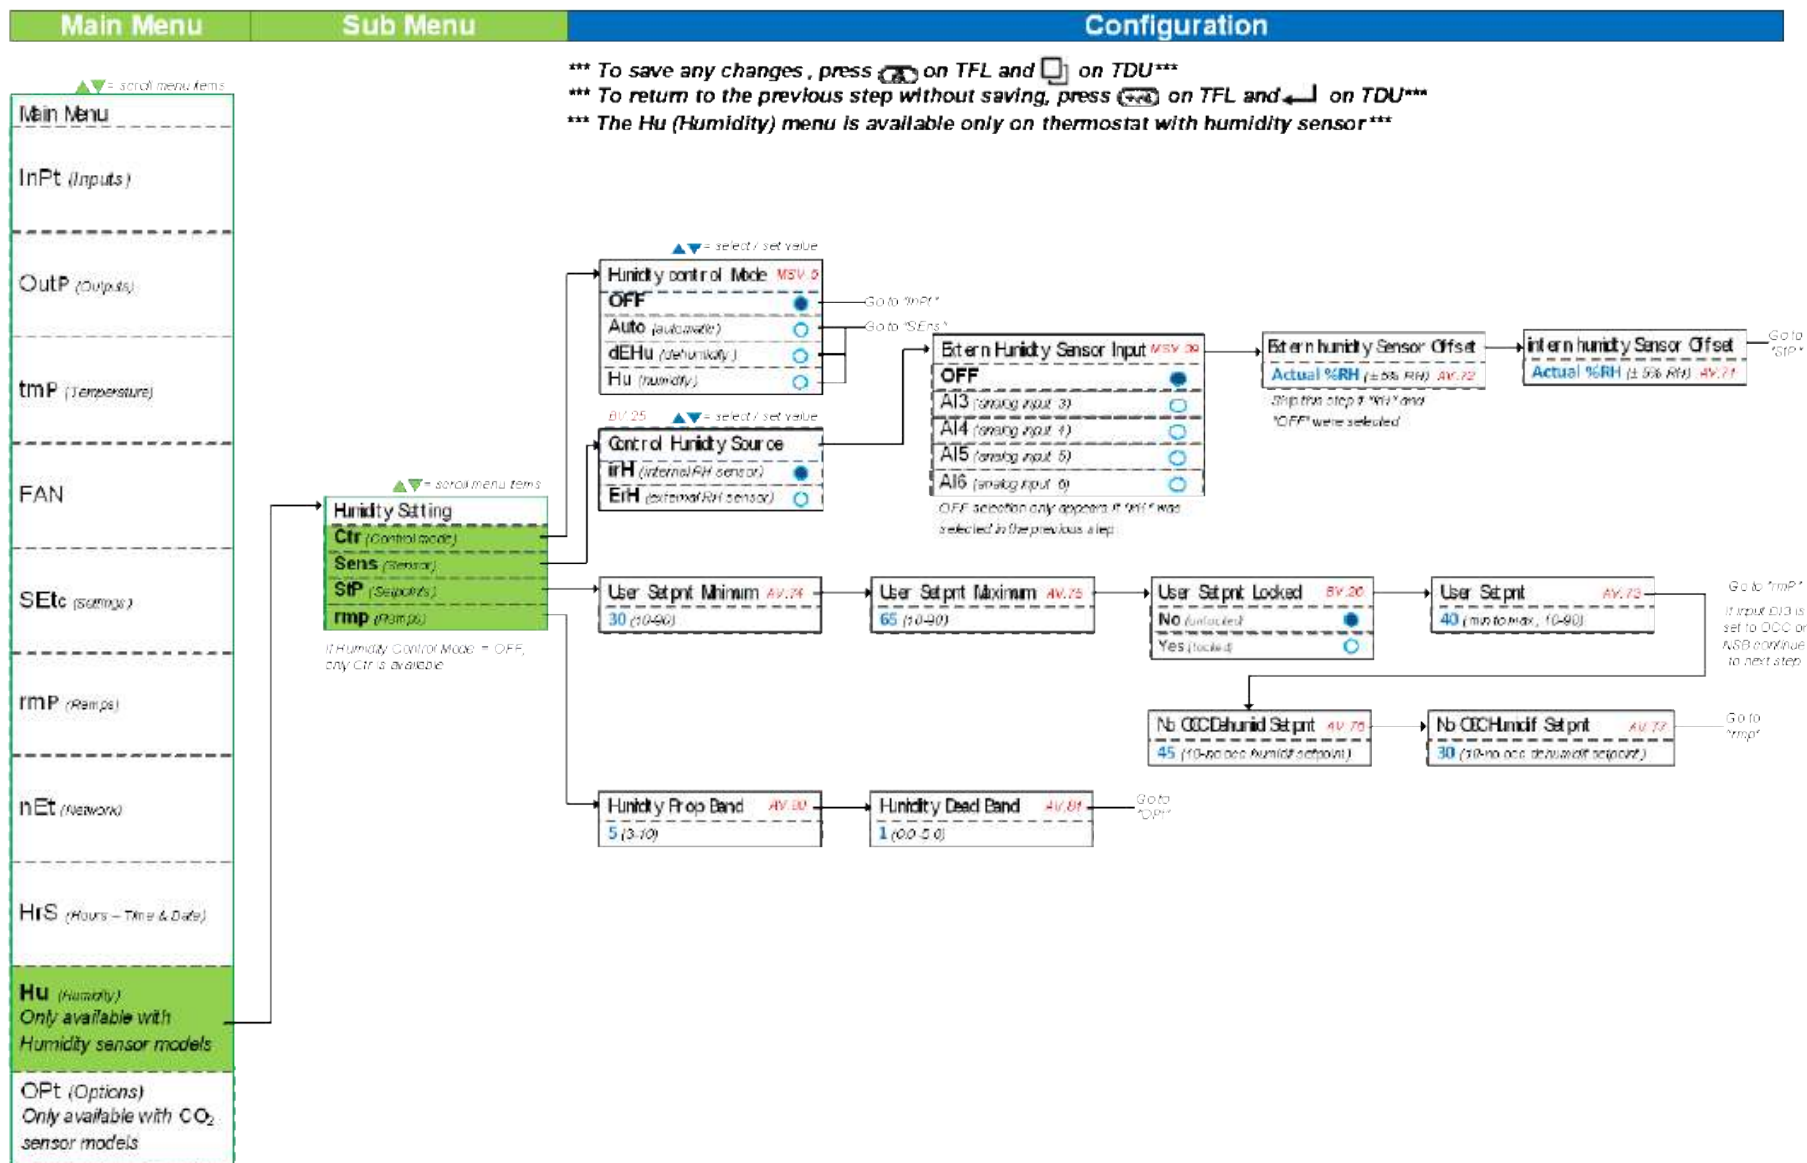





Only available when a humidity sensor thermostat is connected to the controller




Operation Menus

This menu is accessible through normal operation mode.

Note: Since the action buttons are different on the 0BTFL24 and 1BTDU thermostat series, both buttons have been included in the instructions. Refer to the Action Buttons on Thermostat section to know and use the button as available on your thermostat.

1. The Mode Selector jumper (JP1) of the thermostat must be set to the “RUN” position (Operation Mode). Refer to Wiring on page 6.
2. Press the [ / ] and [ / ] buttons simultaneously for 5 seconds. The “Enter Password” screen appears.
3. Enter the password within 1 minute by using the arrow keys to increase or decrease the value and the [ / ] and [ / ] buttons to toggle between the digits.
 - a. Password **372** = Sensor Offset Menu
 - b. Password **637** = Network Settings Menu
4. If you enter the wrong password, the thermostat displays “**Error**” and returns to Operation Mode. The thermostat will return to normal mode if you navigate through the entire menu and do not make any selection, or if you do not press any key for 5 minutes. The changed values will be saved automatically.


Menu 372 – Sensor Offset

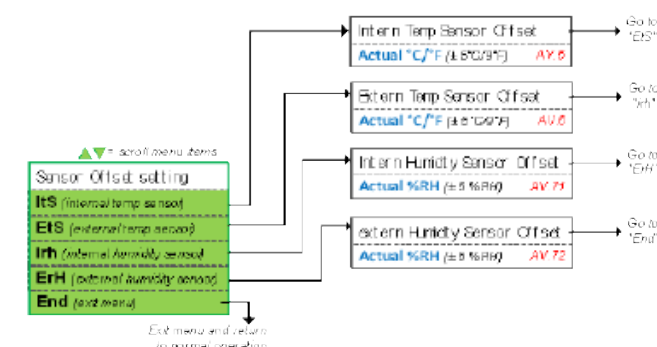

*** To save any changes, press ☒ on TFL and ☐ on TDU ***

*** To return to the previous step without saving, press on TFL and on TDU ***

Menu 637 – Network Settings

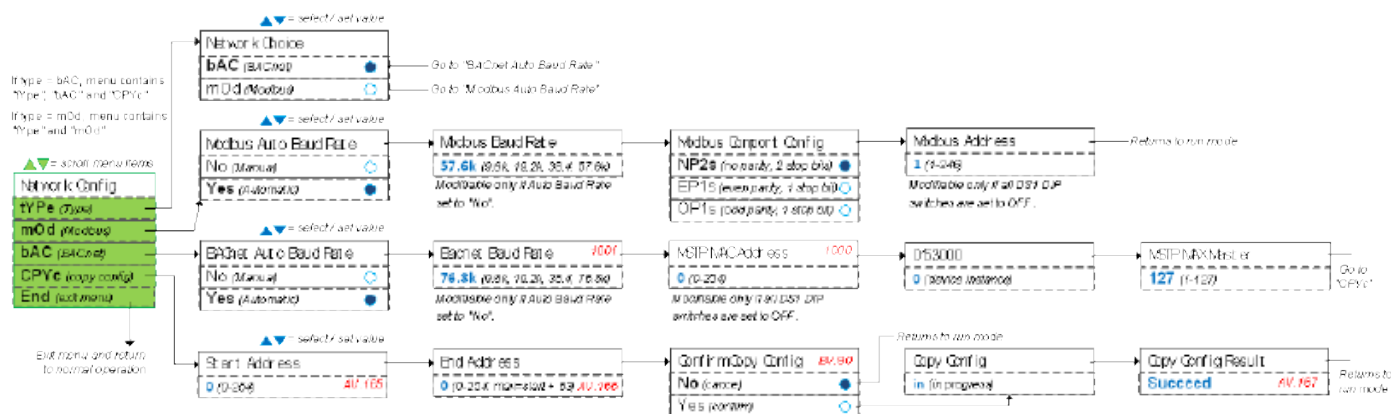


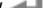







*** To save any changes, press ☒ on TFL and ☐ on TDU ***

*** To return to the previous step without saving , press (F1) on TFL and \leftarrow on TDU ***

Reset to Factory Default Settings




This will erase all actual configurations and replace them with the factory default settings.

1. The Mode Selector jumper (JP1) of the thermostat must be set to the "RUN" position (Operation Mode). Refer to Wiring on page 6.
2. During the power up sequence of the controller and thermostat (when the firmware versions are displayed), press and hold both the [ / ] and  buttons.
3. The "Enter Password" screen appears. Enter **372** within 1 minute by using the arrow keys to increase or decrease the value and the [ / ] and [ / ] buttons to toggle between the digits.
4. Use the arrow buttons to select YES and then press [ / ].


Operation Mode

The Mode Selector Jumper of the thermostat must be set to the "RUN" position (Operation Mode). Refer to Wiring on page 6.

TFL24

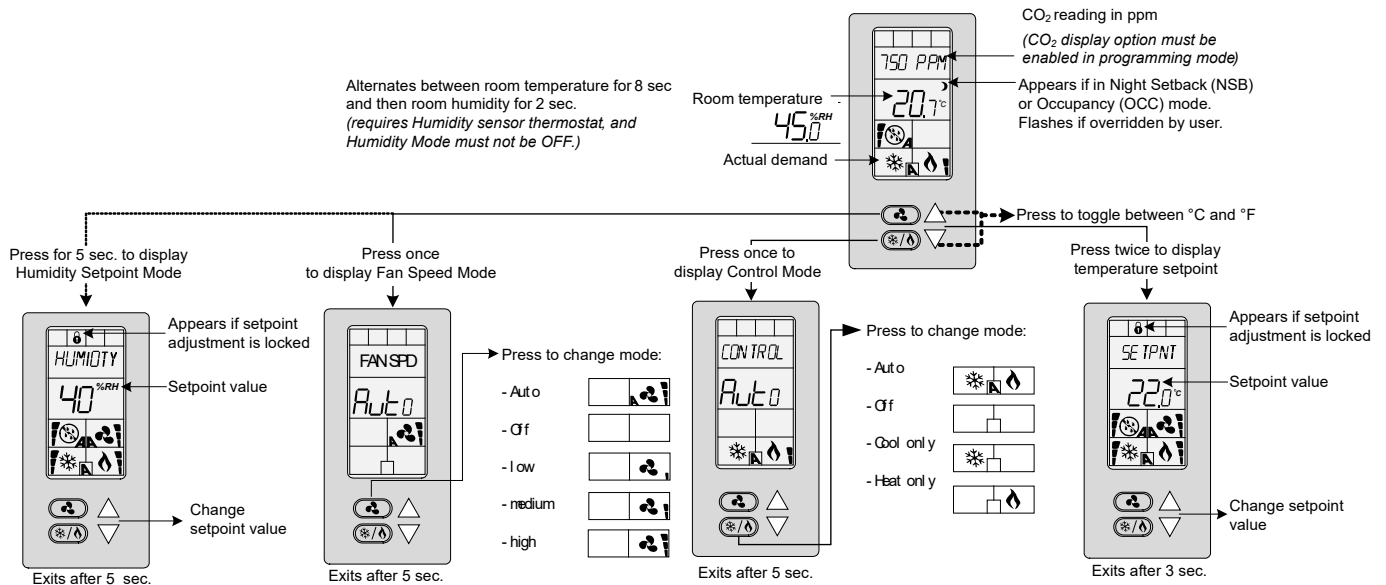

1BTDU

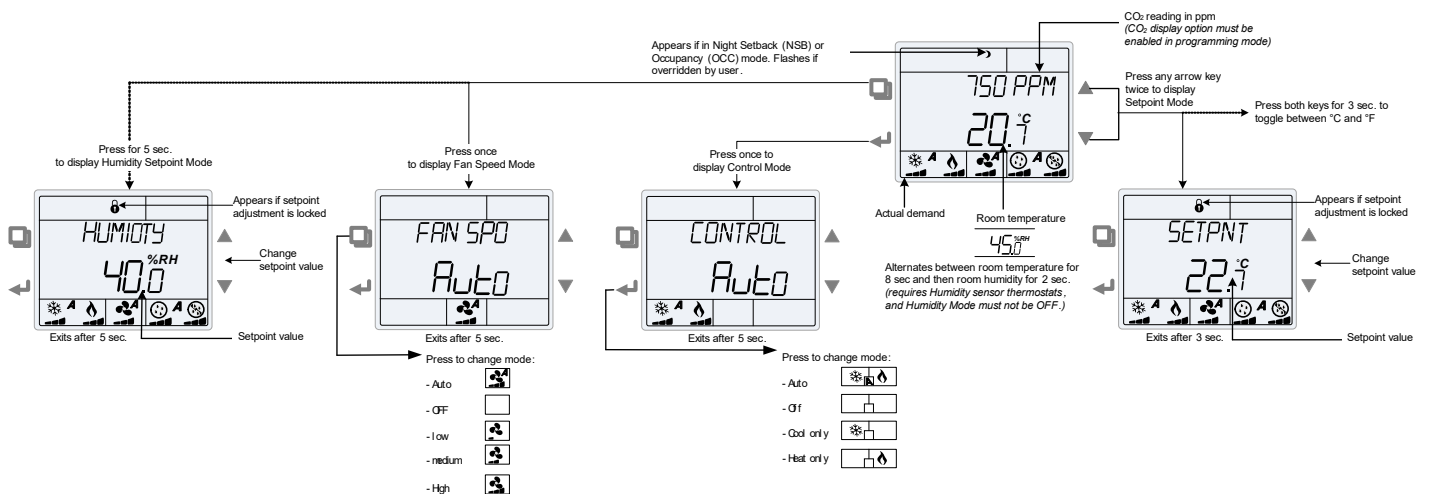

Power Up

Upon power up, the LCD illuminates and all segments appear for 2 seconds. The thermostat then displays its current version of the thermostat for 2 seconds followed by the current version of the controller for 2 seconds. Pressing any key on the thermostat illuminates the LCD for 4 seconds.

CO₂ (Thermostats with CO₂ Sensors)

If enabled via the configuration menu, the thermostat displays the CO₂ reading on the first line above the temperature reading. If CO₂ display is enabled, the time will not be displayed.

Temperature Display and Setpoint

The thermostat displays the temperature reading. If the sensor is disconnected or short circuited, the unit displays the sensor's limits. To toggle the temperature scale between °C and °F, press both the ▲ and ▼ keys for 3 seconds. To display the setpoint, press the ▲ or ▼ key twice. The setpoint appears for 5 seconds. To adjust the setpoint, press the arrow keys while the temperature is displayed. If the setpoint adjustment has been locked, the lock symbol appears.

Temperature and Humidity (Thermostats with Temperature and Humidity Sensors)

The thermostat displays the temperature reading for 8 seconds and then displays the humidity reading for 2 seconds. If the sensor is disconnected or short circuited, the unit displays the sensor's limits. To toggle the temperature scale between °C and °F, press both the ▲ and ▼ keys for 3 seconds.

To access the Humidity setpoint, press the [⏏ / ⏏] button for 5 seconds. The humidity setpoint will be displayed for 5 seconds. To adjust the setpoint, press the ▲ and ▼ keys while the setpoint is displayed. The unit will return to normal mode if you do not press any key for 3 seconds. The changed values will be saved automatically.

Control Mode

To access the Control Mode, press the [⏏ / ⏏] key. The Control Mode appears for 5 seconds. Press the [⏏ / ⏏] key to scroll through the following control modes. These options can vary depending on the options selected.

- Auto (Automatic Cooling or Heating)
- Cooling only (on, with cooling symbol)
- Heating only (on, with heating symbol)
- OFF (if it is not disabled in Programming Mode)

Fan Speed Selection Mode

To access the Fan Speed selection mode, press the [⏏ / ⏏] key. The mode appears for 5 seconds. These options can vary depending on the fan speed signal and auto mode settings. If in No Occupancy mode, the [⏏ / ⏏] button now serves as the override button.

- Automatic speed. Available only if enabled in Programming Mode.
- Low speed
- Medium speed
- High speed
- Off. Off is not selectable by the user, it appears only if the "Control Mode" is "Off" and it indicates that the user can not change the speed of the fan.

Night Setback (NSB)

This function is only available if you've set DI3 to **nSb** (Night setback contact). If the DI3 contact is triggered, the thermostat enters NSB Mode (the ⤴ symbol appears) and uses the NSB setpoints defined in Programming Mode. Press any key to override NSB for the delay defined in Programming Mode (default: 120 minutes). The ⤴ symbol flashes to indicate that the NSB mode is overridden (during this time the standard setpoints are used).

If the NSB Mode was set to OFF, all outputs will be off for the duration of the period and cannot be overridden.

Occupancy Mode


This function is only available if you've set DI3 to **Occ** (occupancy mode). If the DI3 contact is triggered, the thermostat enters Occupancy Mode (the ⤴ symbol appears) and uses the NoOcc setpoints defined in Programming Mode.

If not locked, no occupancy mode can be overridden for a period by pressing the [⏏ / ⏏] button. Each time you press the [⏏ / ⏏] button, 15 minutes are added to the override (up to a maximum defined in program mode).

Press the fan [⏏ / ⏏] button until "0" is displayed to disable the override. The ⤴ icon will flash and the remaining override time will be displayed in minutes.

Set Time and Date

1. Ensure that JP1 on the thermostat is set to run.
2. Press and hold the [⏏ / ⏏] button for 5 seconds.
3. Use the arrow keys to set the desired value. Press the [⏏ / ⏏] button to save and go to the next step. Press the [⏏ / ⏏] button to go to the previous step without saving.

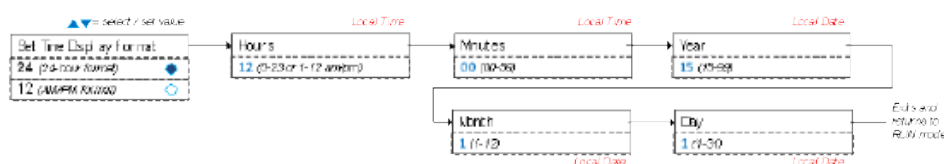

*** To save any changes, press ⏏ on TFL and ⏏ on TDU ***

*** To return to the previous step without saving, press ⏏ on TFL and ⏏ on TDU ***

[illegible]



Recycling at end of life: please return this product to your One Sightsolutions for recycling. If you need to find the nearest One Sightsolutions authorized distributor, please consult **Web: onesight.solutions**.



oneSIGHT
S O L U T I O N S

Web: onesight.solutions

Email: info@onesight.solutions

Tel: 01252 872738

Office hours 8:30am – 5:00pm Mon-Fri